



WAVE SOFT / SPIRRA SOFT


INSTALLATION INSTRUCTIONS | APRIL 2025

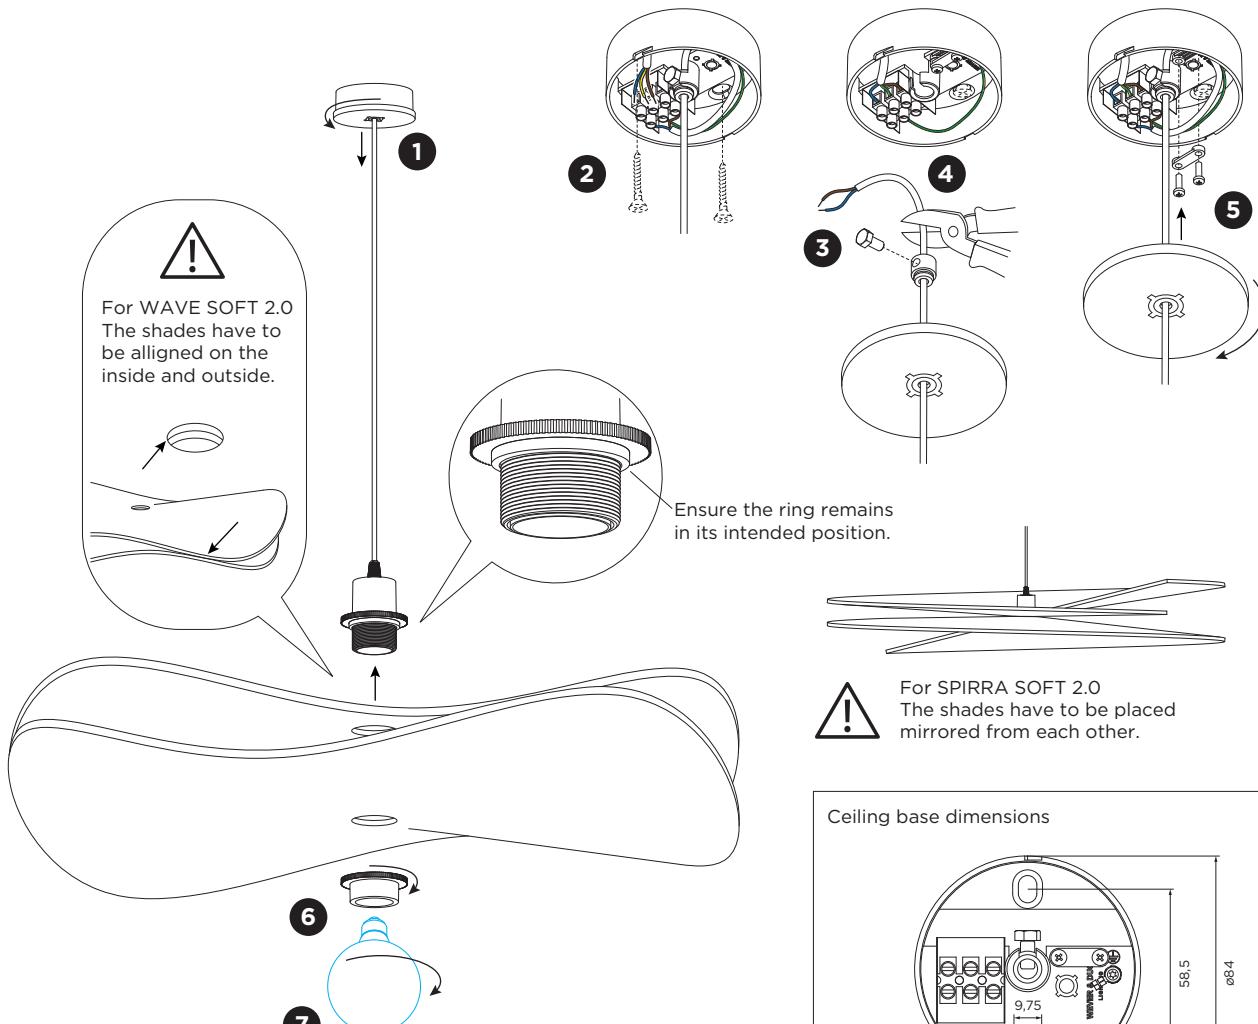

DIMENSIONS

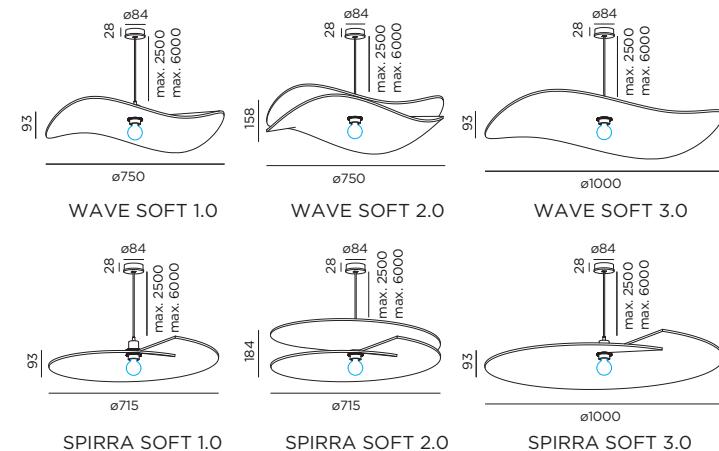

MOUNTING INSTRUCTION

- Turn the cover a quarter counterclockwise to remove it from the ceiling base.
- Mount the base on the ceiling with screws (screws are not included).
- Optional: shorten the cable to your required length and place the strain relief in the strain relief holder.
The power must be switched off before disconnecting and connecting the cables.
- POWER CONNECTION**
Connect to 220-240V.

- Fix the strain relief and mount the cover back to the base by aligning the clamps in the slots and turning it a quarter clockwise.
- Unscrew the lower ring from the luminaire body, put the shade(s) on the body and screw the lower ring back on.
- Install a bulb (bulb is not included).

PB19-011-004-00_v1